

Operating Instructions

This straightener is designed for safety and performance. This appliance may have a polarized plug (one blade is wider than the other.) As a safety feature, this plug will fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

PLATES WITH TOURMALINE AND NANO CERAMIC®


The easy-to-clean plates with tourmaline gemstone and Nano Ceramic® emit maximum hair-conditioning ions and far-infrared heat, helping hair retain its own moisture for soft, shiny styles in a fraction of time.

HELPFUL STYLING HINTS

- Hair should be clean and dried completely before using any styling tool.
- Plug the straightener into an electrical outlet and slide the power On / Off switch to the "On" position.
- Turn the heat setting dial to select the heat level best suited to your hair type. The fiber optic heat indicators will change color from yellow at lower temperatures, to green at higher temperatures.

IMPORTANT: When using the straightener for the first time, select the LOWEST heat setting and test in one small section of hair for 5 to 8 seconds. If you want to use a higher setting, be sure to GRADUALLY increase the temperature. Never style hair for the first time on a high setting as this may damage your hair. Use only as much heat as you need for effective styling. Over time, using more heat than is necessary can result in hair damage.

- When styling is complete, turn the straightener off by sliding the power On / Off switch to the "Off" position, unplug it from the electrical outlet, and let it cool completely before storing.
- Allow hair to cool before combing, brushing, or touching.

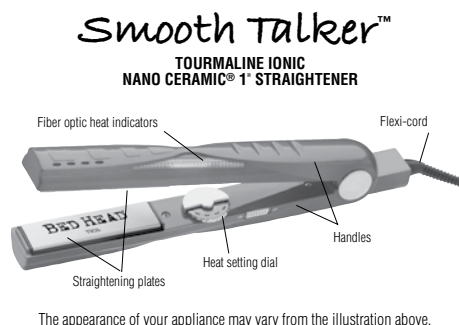

HAIR TYPE	HEAT LEVEL
Fine, thin hair	LOW
Wavy to medium hair	MEDIUM
Thick, hard-to-style hair	HIGH

**GET
THE
LOOK!**

1. PREP

Get your hair ready for super-sleek styles that get straight to the point! Before styling, apply a small amount of Bed Head® Control Freak™ Serum to the ends of damp hair to help condition and protect hair from thermal damage. Blow-dry as desired and section hair in small pieces.

2. STYLE

Working from the scalp to the ends of your hair, place a 2-inch section of hair between plates and clamp down firmly on the handles. Slide your Bed Head® Smooth Talker™ Straightener along the isolated section, making sure the hair is heated and straightened all the way to the ends. Repeat the process until desired look is achieved.

3. FINISH

To finish your look, smooth Bed Head® Control Freak™ Serum over fly-aways to smooth hair and add shine.

**BED
HEAD®**

TIGI (USA)

Smooth
Talker™

Model BH213

**SUPER-SLEEK
STYLES
GET STRAIGHT
TO THE
POINT**

**GET
THE
LOOK!**



*Bed Head® Control Freak™ Serum sold only in professional salons.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING.

KEEP AWAY FROM WATER.

DANGER: As with most electrical appliances, electrical parts are electrically live even when the switch is off.

To reduce the risk of death by electric shock:

1. Always “unplug it” immediately after using.
2. **DO NOT** use while bathing.
3. **DO NOT** place or store appliance where it can fall or be pulled into a tub or sink.
4. **DO NOT** use near, place in or drop into water or other liquid.
5. If an appliance falls into water, “unplug it” immediately. **DO NOT** reach into the water.
6. **DO NOT** use an appliance whose cord has become twisted, bent or otherwise damaged.

WARNING: To reduce the risk of burns, fire, electrocution, or injury to persons:

1. An appliance should never be left unattended when plugged in. Turn off the switch and unplug the electrical cord when not in use.

2. Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use as described in this manual. **DO NOT** use attachments not recommended by the manufacturer.
4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped into water. Return the appliance to a service center for examination and repair.

NOTE: Helen of Troy L.P. does not have an authorized service center. However, if this appliance is still under warranty, return it to the Consumer Service Department for replacement.

5. Keep the cord away from heated surfaces. **DO NOT** pull, twist or wrap the cord around the appliance.
6. Never use while sleeping.
7. Never drop or insert any object into any opening.
8. **DO NOT** use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
9. **DO NOT** use an extension cord with this appliance.
10. The plates of this hair straightening iron are hot when in use. **DO NOT** let bare skin and eyes touch heated surfaces. Use the handle.
11. **DO NOT** place the heated hair straightening iron directly on any surface while it is hot or plugged in.
12. Attachments (when furnished) may be hot during use. Allow them to cool before handling.
13. **DO NOT** operate with a voltage converter.

SAVE THESE INSTRUCTIONS

USER MAINTENANCE INSTRUCTIONS

Maintenance

Your appliance is virtually maintenance free. No lubrication is needed. Keep heated surfaces clean and free of dust, dirt, and hair spray. If cleaning becomes necessary, unplug the appliance from the power source and wipe the exterior with a damp cloth. If the cord becomes twisted, untwist prior to use.

WARNING: If any malfunction occurs, do not attempt to repair. This appliance has no user-serviceable parts.

STORAGE

When not in use, “unplug it.”

Allow appliance to cool and store out of reach of children in a safe, dry location. Never wrap the cord around the appliance since this will cause the cord to wear prematurely and break. Handle cord carefully for longer life and avoid jerking, bending sharply, twisting, or straining cord, especially at plug connections.

Limited 36-Month Warranty

This appliance is warranted against defects in material or workmanship for 36 months from the date of purchase. Any problems arising from misuse, attempts at repair, dropping or extreme wear are not covered by this warranty. The store where the item was purchased is authorized to make an exchange only if the return is made within 30 days from purchase date. For exchanges after 30 days, send the appliance postage paid along with proof of purchase, a note explaining reason for return, and \$6.00 US to cover handling, insurance, and return postage costs to: Helen of Troy L.P., Consumer Service Department, 1 Helen of Troy Plaza, El Paso, Texas 79912 USA. **(In US Only:** California residents are not required to send \$6.00 US.) Toll-free number 1-800-487-7273.

This warranty gives you specific legal rights, and you may also have other rights, which may vary depending on where you live.

BED HEAD®

TIGI
www.tigihaircare.com

Made in China
Distributed by Helen of Troy Limited
El Paso, TX 79912 USA
www.HelenofTroyUSA.com

Bed Head® and TIGI® are registered trademarks of Unilever PLC or its affiliates and are used by Helen of Troy Limited under license.

NANO CERAMIC® is a trademark of Helen of Troy Limited.

©2011 All rights reserved.

For product information, visit us at
www.bedheadstyling.com

(BH-568)(USA)
Printed in China

 Printed on recycled paper.